

Product Description

The access harness is designed to be as accessible as possible to users who need extra support than offered by standard harnesses. The user sits in the harness once it has been fitted to them. The user can then walk around or remain seated while using the harness. The harness has two attachment points at the front. The user is secured in the harness by a waist strap, a chest strap and leg loops.

Product Scope of Use

The scope of the use of the harness is recreational. The harness maintains the static load of the user (similar definition to 'work positioning'). No dynamic loads are applied to the harness.

Conformity Standards/Specifications

The harness has been tested to the relevant sections of EN1651: 1999 Paragliding equipment – harnesses – safety requirements and strength test.

PRODUCT RECORD CARD

THIS DOCUMENT SHOULD BE ISSUED WITH AND KEPT FOR EACH ITEM OR SYSTEM

- Please see the product label details required below.
- Consult the User Guide for advice on inspection, maintenance, lifespan etc.

Product Label Definitions

1. Manufacturers name and contact details
2. Manufacturers product code
3. Date of manufacture
4. Read instructions supplied with product
5. Serial Number



Tel: +44(0)1244 837 050
email: sales@abtechsafety.com

2 Model: AB10 STD

Serial Number: XXXXXX 5

3 Date of Manufacture: 09/2012

4 READ INSTRUCTIONS BEFORE USE

Production Quality Control System.

ISO9001:2015 Certificate number: 1203060

In conformance to Article 11 B of the PPE Directive

Satra Quality Assurance, Wyndham Way, Kettering, Northamptonshire NN16 8SD.

Tel: +44 (0)1536 410 000 Fax: +44(0)1536 410 626

MANUFACTURE DETAILS


PRODUCT CODE	PRODUCT SERIAL NUMBER
FINAL INSPECTION PRIOR TO DESPATCH BY	DATE

ACCESS SIT HARNESS

PRODUCT CODE: ACCESS

FITTING & ADJUSTMENT

- A. Disconnect all buckles and put arms through the arm holes of the harness vest.
- B. Connect the leg buckles and tighten. Pull straps backwards to tighten leg loops (pull buckle straps forward to loosen).
- C. Connect the waist belt buckles and tighten.
- D. Connect the chest strap buckle and tighten.
- E. Pull down shoulder straps to tighten (pull up buckle straps to loosen).

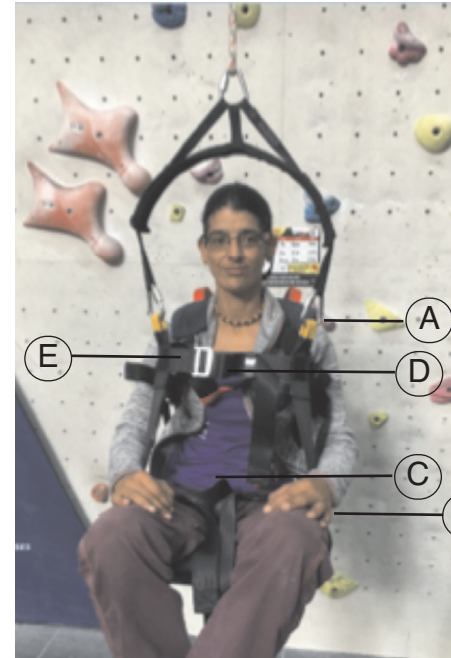


ATTACHMENT

Attach to the attachment points on either side of the harness. These attachment points are easily identified by the YELLOW colour.

Red straps are 'grab' straps only. Not suitable for attachment.

A spreader bar (such as the SAR Lifting Bridle shown above) is very useful when using the harness in a vertical or near vertical orientation.

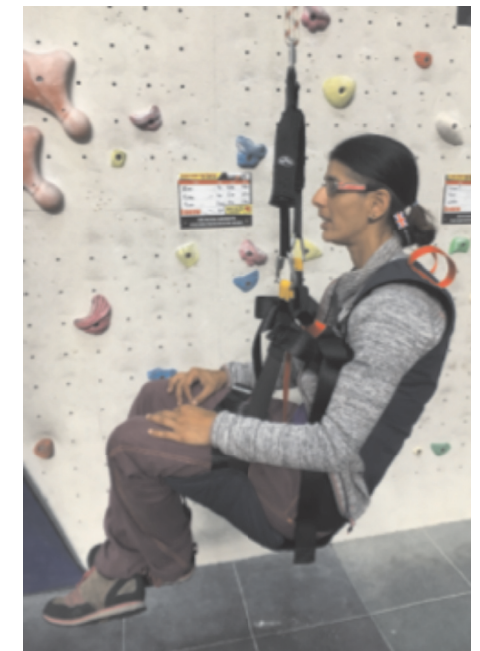

USER MANUAL

Instructions for use

All users or those responsible for the user should read and understand these instructions.
 All users or those responsible for the user should be suitably trained to use this equipment.
 Working load limit: 200kg. Minimum working load: 30kg
 Maximum height: 2.0 metres Minimum height: 1.2 metres

The documentation issued with this harness (instructions, record card) should be kept with the harness.

Anchor points

This harness is designed to be attached to a system that is designed with anchor points of sufficient strength and stability to safely support the load applied.

Chemical attack

The harness should be kept away from acids, alkali, chemicals, sharp edges and anything which may cause damage to it.

Storage and Transport

This harness must be transported and stored in a dry cool place. Wet or damp equipment should be allowed to dry naturally.

Inspection

This harness must be inspected at regular intervals by a competent person. The frequency of the inspection is dependent on the type of usage and any prevailing conditions.

Obsolescence

Provided that the product is inspected and maintained in accordance with manufacturers recommendations the maximum lifespan of the product is 10 years from the recorded first use. The type of use and the conditions will affect the lifespan of a product.

Cleaning

Wipe webbing with a damp cloth. If the dirt is more ingrained wash in water up to 40 degrees C. Use mild detergent. Rinse in clean water. Hang up to dry. Avoid direct heat source when drying.

Before Use

The user should make a visual inspection of the harness. Look for damage to webbing particularly under and around buckles and attachment points. Check webbing for abrasion, cuts, wear, deformation and chemical contamination. Check stitch patterns for broken or loose stitches, cuts and pulling. Check the correct operation of any moving parts. If there is any doubt as to the condition of the harness it must be removed from service. A further inspection should then be carried out by a competent person or the manufacturer. A rescue plan should be in operation.

Warning

No repairs, alterations or additions should be made to this equipment without consultation with the manufacturer. The equipment should not be used outside its limitations, or for any purpose for which it is not intended.

Attachment Point

The harness must only be used with attachment lanyards of suitable strength.

ITEM	USERS NAME
SERIAL NUMBER	DATE OF PURCHASE
	DATE FIRST USED

INSPECTION RECORD

JOB USAGE	INSPECTED BY	COMMENTS	DATE



Abtech Safety Ltd, 1&2 Parkway Business Centre,
 Sixth Avenue, Zone 2, Deeside Industrial Estate,
 CH5 2LE
 Tel: +44 (0)1244 837 050
 Fax: +44(0)1244 837 051
 sales@abtechsafety.com
 www.abtechsafety.com